

EZ – LOADER

Part #1000-EZL



Step 1: Remove the silver ring from the cartridge loader. Next, remove the cap from the cartridge.

Step 2: Insert the open end of the cartridge into the open end of the cartridge loader. Next, Remove the metal pull tab from the end of the cartridge.



Step 3: Install the silver ring onto the red barrel.



Step 4: Thread the cartridge loader with a tube of grease onto the grease barrel of the gun.

Step 5: Release the hydraulic pressure so the hydraulic fluid can return to the reservoir of the grease pump.



Step 6: Push the Tee Handle on the cartridge loader down until all the grease in the tube is loaded in the grease barrel of the gun.



Step 7: Remove the cartridge loader and install the hose assembly on the grease barrel, tight.