

# Screw Prime Gun Instructions



## Step 1:

Remove **Barrel Assembly** from the **Head** of the gun.



## Step 2:

Back out the **Tee Handle** until it stops.



## Step 3:

Insert a "J" or "K" stick into the opening of the barrel.



## Step 4:

Install the **Barrel Assembly** with a stick of grease into the **Head** of the **Screw Prime Gun**.



## Step 5:

Turn the **Tee Handle** clockwise until tight.



## Step 6:

Start pumping the handle up and down until the product starts to exit the giant button head coupler. You will have to repeat steps 5 and 6 several times to empty the barrel. To reload a stick of grease, repeat steps 1-6 above.

