

Hydraulic Calibration Sub

The Hydraulic Calibration Sub allows rapid and accurate set up of the Power Jar prior to deployment.

The Hydraulic Calibration Sub is easily made up to the jar by sliding the sub over the lower end and by simply inserting the punch and split guide ring. The handle can then be turned to open the jar at the predetermined setting required. With a 1:1 setting ratio, the hydraulic gauge displays the actual release force expected downhole.

APPLICATIONS

- Directly calibrates the Power Jar for downhole use

FEATURES AND BENEFITS

- One Calibration Sub suits all connection types
- Removal of integral threaded jar subs not required
- Direct 1:1 setting ratio
- Quick and easy Power Jar set-up
- Inventory reduction
- Robust design



▲ Hydraulic Calibration Sub with Power Jar

Product Code: Hydraulic Calibration Sub / 221

info@peakwellsystems.com | peakwellsystems.com

© 2021 Peak Well Systems Pty Ltd. All rights reserved. Revision: 10th August 2021

peak 
WELL SYSTEMS